

Accessories for RL-60R, RL-60LR and RL-61



WAC-40

 
Connect the WAC-40 to your dehumidifier
when wet air cannot be ducted out

- Wet air condenser
- Control and electric supply from the dehumidifier
- No heat loss, heat stays in the room in form of heated cooling air and dried process air
- Easy removable heating exchanger for maintenance
- Quick installation
- Options:
 - Duct connection with damper between dehumidifier and WAC





World leaders in dehumidification.

CORRECTION DIAGRAM

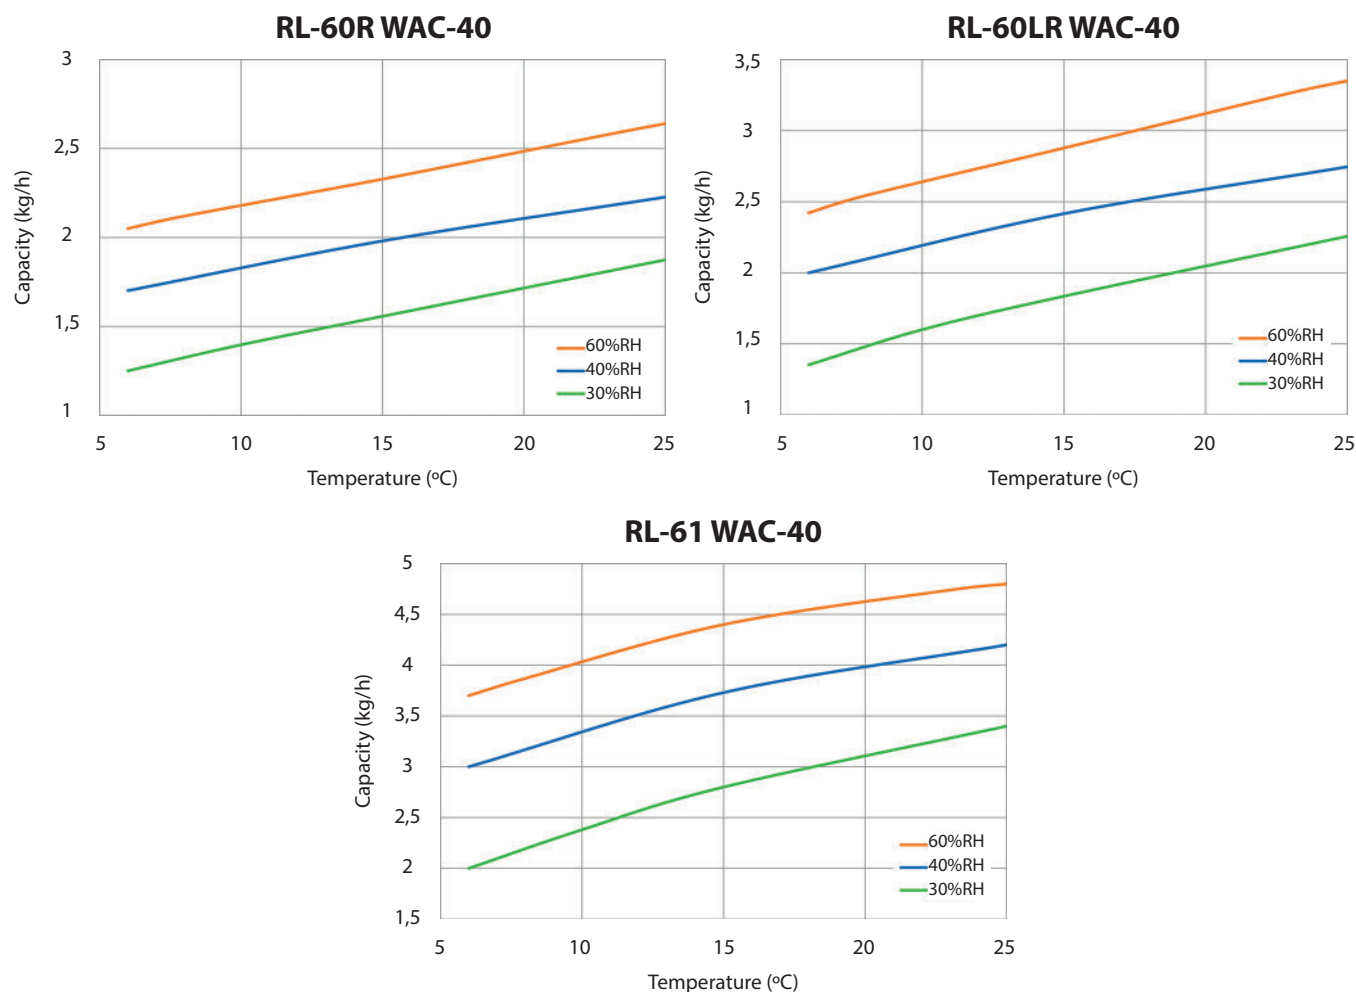

DIMENSIONS

  Subject to change without notice. Download installation drawing at www.dst-sg.com

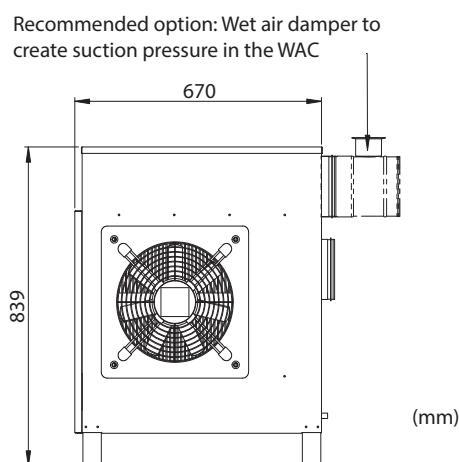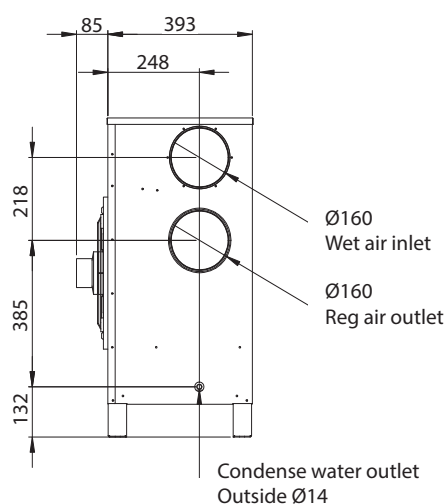

Updated 19.04



Sweden | +46 8 445 77 20
info@dst-sg.com | www.dst-sg.com



United Kingdom | +44 1422 312562
enquiries@dsthumiditycontrol.co.uk
www.dsthumiditycontrol.co.uk